

# **NAVA Flowchart — Neonates**

## **NAVA Terminology**

**Edi** is the electrical activity of the diaphragm and can be thought of as a **respiratory vital sign**.

**Edi**<sub>peak</sub> is the highest value of the Edi signal during a single breath.


**Edimin** represents the spontaneous tonic activity of the diaphragm, which prevents derecruitment of alveoli during expiration.

**NAVA level** is a gain factor that converts the Edi signal into a proportional pressure. The higher the NAVA level the more work of breathing the ventilator provides. The lower the NAVA level the more work of breathing the patient does.

### Edi catheter insertion and positioning

- 1. Connect the Edi module and cable
- 2. Perform the Edi module function check
- Measure NEX (nose-ear and xiphold) distance in cm (123)
- 4. Determine the insertion distance
- 5. Dip the Edi catheter in water and insert
- 6. Connect the Edi cable to catheter
- 7. Verify the position in the catheter positioning screen
- 8. Check the position of the Edi catheter as a feeding tube according to hospital routines
- 9. Secure it to the patient, and make a note of the insertion distance
- 10. Verify the position regularly

**Note:** For neoanates below 1000 g, use Edi catheter 6Fr / 49 cm

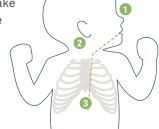

## **Positioning Window**



#### Correct position

Look for a diminishing ECG waveform progressing from the 1st to the 4th waveform, and the presence of a pink color in the 2nd and 3rd waveforms (this may fluctuate to the 1st and 4th waveforms at times).

# **Re-Positioning**





**Too deep** Pull out slightly.

P waves gradually decreases and disappear in the lower leads. Dampened QRS.

POSITIONING			×
			-4
		المصاحصا	
	- P - P		
	_	Lalas	
- Ar Ar	1.1	بل المال	TF F
- de de de	11-11-1	1-4-4	vir -
Julul		LIL	
<u> 14 - 14 - 14 - 14</u>	W W I		
Final insertion distance	Set NA	VA mode	Done
16 cm 20-01-31 13:49	Jul 104		- Colle



Too shallow Insert slightly further. QRS gets bigger from the top to bottom leads.



Protocol contributed by Howard Stein MD (Russell J. Ebeid Children's Hospital, Toledo, OH, USA) and Kimberly Firestone MSc, RRT (Akron Children's Hospital, Akron, OH, USA).

#### Initial NAVA set-up

Parameters	NAVA/NIV NAVA	Management
NAVA Level	Start with a low NAVA level (1.0–2 cmH <sub>2</sub> OμV)	<ul> <li>Titrate to neonates' comfort and Edi peak 10–15 μV</li> <li>If the patient is comfortable and the Edi peaks are &lt;5μV, decrease the NAVA Level in steps of 0.5 until the Edi peak values are 5–15 μV</li> <li>If there is an increased WOB and Edi peak &gt;20μV increase the NAVA level in 0.5 increments until the patient is comfortable and the Edi peaks are &lt;15 μV</li> </ul>
Edi trigger	0.5 μV	Avoid "artifact self-triggering" which can happen when trigger is too low (lower number is more sensitive)
Apnea time	2	Adjust as clinically indicated (minimum rate – 2 seconds = 30 bpm; 1 second = 60 bpm)
Ppeak	$35-40 \text{ cmH}_2\text{O}$ <b>NOTE:</b> The pressure will be limited 5 cmH <sub>2</sub> O below the Ppeak alarm limit and generate a blue pressure limited alarm	Set Ppeak pressure limit high enough to allow recruiting breaths. Increase if pressure limited alarm is constantly reached
Backup	If patient is apneic, backup mode (Pressure Control) is activated after the set apnea time is reached	Set PC level and RR to assure adequate ventilation

#### **Weaning in NAVA**

- Decrease the NAVA level in steps of 0.3–0.5 cm  $H_2O/\mu V.$
- Decrease back up settings if in backup frequently.
- Once at NAVA level  $0.5-1\,cm\,H_2O/\mu V,\,extubate \ to\,NIV\,NAVA,\,go\,from\,NIV \ NAVA to\,CPAP \,or\,High\,Flow.$
- Follow local policy and weaning protocol integrate NAVA level and Edi as decision criteria.
- Monitor the Edi signal in CPAP, CPAP or High Flow therapy.

NOTE: Set appropriate PEEP for the patient and the Back up settings: PC above PEEP and RR

## Troubleshooting

Parameter	Investigate the reason	Management	
High Edi <sub>peak</sub> >20μV	WOB increased	Increase NAVA level, increase Ppeak alarm limit	
	Insufficient backup support	Increase backup pressure	
	Failing NIV treatment	Intubate and use NAVA	
	Discomfort and Pain	Consider light analgesics	
	Edi catheter dislocated	Reposition Edi catheter	
Low Edi <sub>peak</sub> <5µV	Over-assist	Decrease NAVA level	
	Poor respiratory drive	Decrease backup support	
	Sedation too high	Decrease sedation	
Edi <sub>min</sub> consistently >5µV	Atelectasis	<ul> <li>F<sub>i</sub>O<sub>2</sub> high-increase PEEP by 1</li> <li>Patient clinically stable — no change</li> </ul>	

Refer to the SERVO-u/n User's Manual for operation of the ventilator

**Sales Office** · Getinge · 1 Geoffrey Way · Wayne, NJ 07470 · USA

Manufacturer · Maquet Critical Care AB · 171 54 Solna, Sweden · Phone: +46 (0)10 335 00 00 · info@getinge.com

www.getinge.com

